


Instrument Trolley Lay Out

Carol Bradley QVN, Cert III in Health, Cert IV in AWPT

BACK OF INSTRUMENT TROLLEY

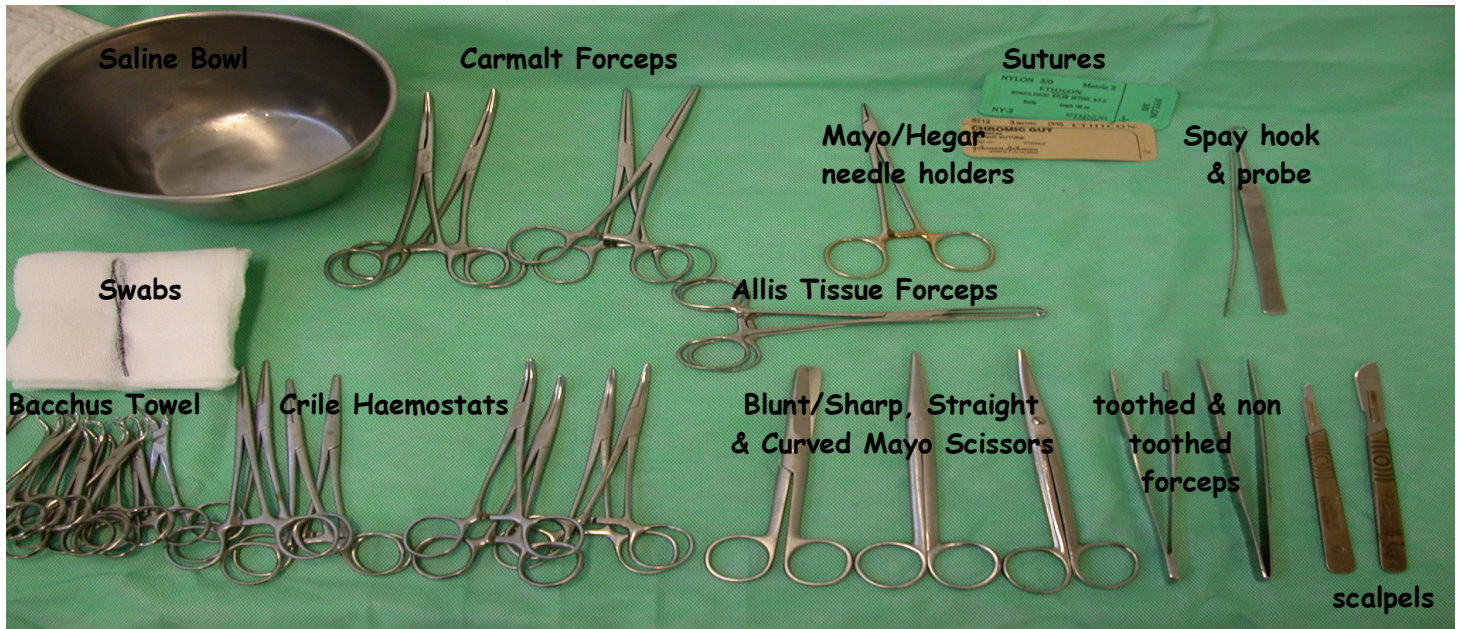

FRONT OF TROLLEY

- Lay out the instruments according to the chart above. Instrument handles generally face toward the surgeon and assistant.
- Remove the sterile bowl from the paper bag and without lowering your hands below the table level, carefully drop the paper into the kick bin.
- Keep the bag of saline sitting in the stainless steel bowl and use the 22 scalpel (loaded onto the No. 4 blade handle), to make a small cut at the bottom of bag. Leave the bag to slowly empty into the bowl. You may discard the empty bag into your kick bin.
- Avoid spilling any saline onto the instrument table or on your instruments.
- Begin draping your patient by using your four square drapes. The placement sequence for disposable adhesive drapes is near, top, tail and far.
- The large drape is placed on your patient, **then** unfolded. You may need to cut a fenestration in the large drape by using your blunt sharp scissors.
- Once the patient is fully draped, pull your instrument trolley closer to the operating table, taking care not to contaminate yourself or your instruments.